

### Setting the password

With the door open, press the Reset button **A**.

The safe will emit two beeps.


Choose a password (3-8 digits), punch it on the keypad and press **#** to confirm.

If the icon turns on, the new password is successfully set.

If the icon flashes, the safe failed to set the new password. Repeat the steps above until successful.

Close the door, then turn the knob counterclockwise to lock it.

**NOTE:** Test the new password with the door open before locking the door.

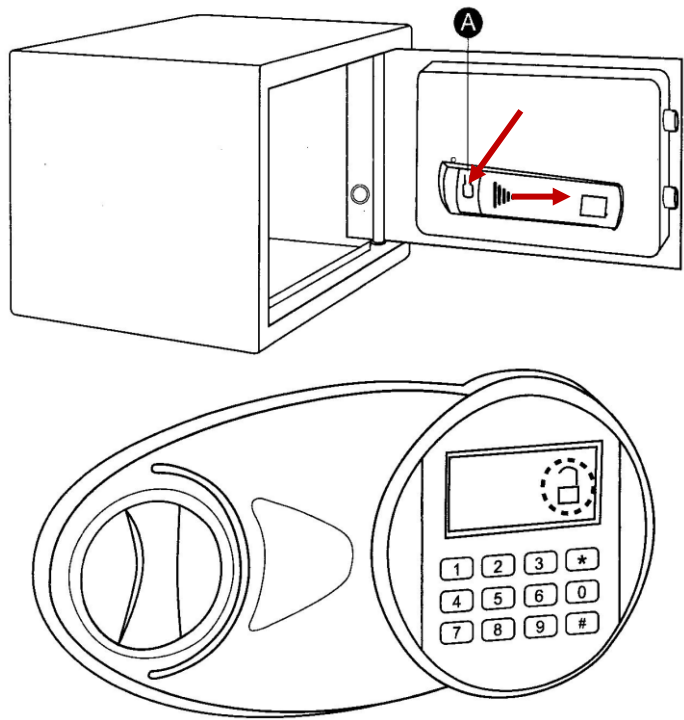

### Operation

Input your password (3 to 8 digits) on the keypad. Press **#** to confirm.

The icon turns on.

Rotate the knob clockwise and open the door.

Close the door, then turn the knob counterclockwise to lock it.

**Before checking out, leave the safe-door open and turn the knob counterclockwise!**

